



# C159 - C169

**DORMER**

- Slot Drills
- Langlochfräser
- Spiebaanfrezen
- Fraises à rainurer
- Fresas Frontales
- Fresa de Topo de Ranhurar

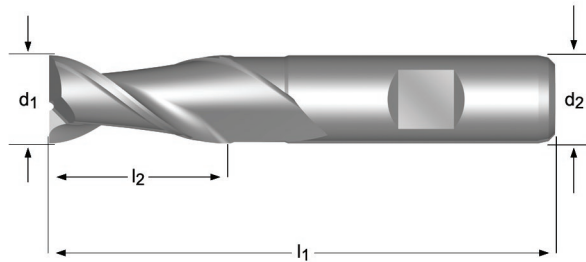


## C159



- 1.1 6.1 7.1 7.2 7.3
- 1.2 1.3 2.1 2.2 4.1 5.1 8.1

$d_1$ Ø mm	$d_2$ Ø mm	$l_2$ mm	$l_1$ mm	z	e-Code	$d_1$ Ø mm	$d_2$ Ø mm	$l_2$ mm	$l_1$ mm	z	e-Code
2,00	6	7	51	2	C1592.0	12,00	12	26	83	2	C15912.0
3,00	6	8	52	2	C1593.0	13,00	12	26	83	2	C15913.0
4,00	6	11	55	2	C1594.0	14,00	12	26	83	2	C15914.0
5,00	6	13	57	2	C1595.0	15,00	12	26	83	2	C15915.0
6,00	6	13	57	2	C1596.0	16,00	16	32	92	2	C15916.0
7,00	10	16	66	2	C1597.0	18,00	16	32	92	2	C15918.0
8,00	10	19	69	2	C1598.0	20,00	20	38	104	2	C15920.0
9,00	10	19	69	2	C1599.0						
10,00	10	22	72	2	C15910.0						
11,00	12	22	79	2	C15911.0						

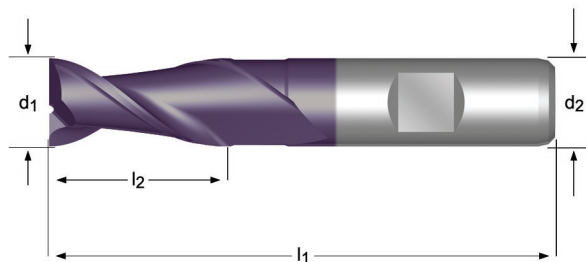

## C169



- 1.1 1.2 6.1 7.1 7.2 7.3 7.4
- 1.3 2.1 2.2 2.3 4.1 4.2 5.1 5.2 6.2 8.1

$d_1$ Ø mm	$d_2$ Ø mm	$l_2$ mm	$l_1$ mm	z	e-Code	$d_1$ Ø mm	$d_2$ Ø mm	$l_2$ mm	$l_1$ mm	z	e-Code
2,00	6	7	51	2	C1692.0	10,00	10	22	72	2	C16910.0
3,00	6	8	52	2	C1693.0	12,00	12	26	83	2	C16912.0
4,00	6	11	55	2	C1694.0	14,00	12	26	83	2	C16914.0
5,00	6	13	57	2	C1695.0	16,00	16	32	92	2	C16916.0
6,00	6	13	57	2	C1696.0	18,00	16	32	92	2	C16918.0
7,00	10	16	66	2	C1697.0	20,00	20	38	104	2	C16920.0
8,00	10	19	69	2	C1698.0						
9,00	10	19	69	2	C1699.0						